

## Target


This document describes in short form update procedure of your microsensys USB RFID device to work with WHQL compatible, signed USB drivers available up from Q4/2014.

## Preparation

- 1) Plug your microsensys RFID USB device into your PC
- 2) Unplug other USB devices using USB UART bridge
- 3) Download USB re-configuration tool to your local PC  
<https://www.microsensus.de/downloads/Additional%20Content/USB%20configuration/USB%20Reconfiguration%20Tool.zip>
- 4) Download WHQL compatible, signed USB drivers to your local PC  
<https://www.microsensus.de/downloads/CDCContent/USBDriver/microsensus%20USB%20devices%20driver%202.12.28%20WHQL%202019-12/>
- 5) Unzip downloaded content

## Device update procedure

- 1) Start re-configuration tool, follow the instructions on your screen
- 2) After completion following screen should appear

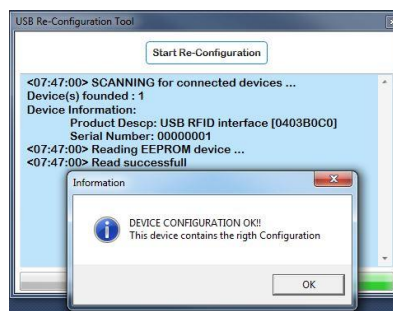

## Driver update procedure (optional)

- 1) Go to device manager
- 2) Remove drivers Ports/USB RFID interface and USB controller/USB RFID interface
- 3) Search for new hardware
- 4) Install WHQL compatible, signed USB drivers

## Contact/Copyright

microsensus GmbH • In der Hochstedter Ecke 2 • 99098 Erfurt • Germany  
phone: +49 (0) 3 61 5 98 74-0      fax: +49 (0) 3 61 5 98 74-17  
e-mail: [info@microsensus.de](mailto:info@microsensus.de)      web: [www.microsensus.de](http://www.microsensus.de)

Any reproduction of this short manual in whole or in part, the storage in electronic media and the translation into foreign languages without the written permission of microsensus GmbH is forbidden.

© 2014 microsensus • all rights reserved